
USER MANUAL

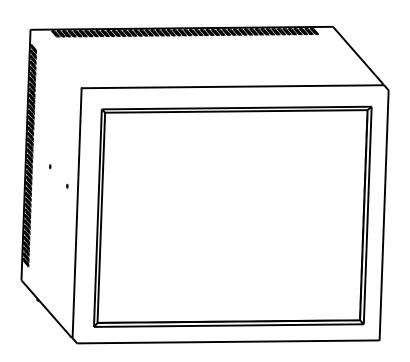

CONTENTS

- 1- Warning
- 2- Pre-installation warnings and safety precautions
- 3- Technical specifications of minibar
- 4- Intended use of minibar
- 5- Instructions for correct installation in a furniture unit
- 6- Fixing the minibar to the furniture unit
- 7- First use and regulation of minibar
- 8- Disposal
- 9- Cleaning the minibar
- 10- Instructions to follow to return the minibar
- 11- Recommendations for improved energy savings
- 12- Troubleshooting
- 13- Warranty

Before placing the minibar into service, read this manual carefully in all its parts!

Dear Customer.

We would like for this product, which is developed in modern production lines and subjected to thorough Quality Control testing, to offer maximum performance.

We kindly ask that you:

- -store this manual in such a way that it can be accessed if needed, as it may need to be consulted in the future.
- -follow all the safety instructions.
- -read any other supplementary documentation attached to this manual.

This product complies with the EU Directives and Regulations listed below:

- Regulation 2014/35/EU
 concerning electrical materials intended for use within certain voltage limits (LVD).
- Regulation (EU)2019/2019

 → Directive 2009/125/EC (ERP).
- Regulation (EU)2019/2016 → Directive 2010/30/EC (ECO-LABEL).

IMPORTANT NOTICE:

THE MANUFACTURER RESERVES THE RIGHT TO MAKE CHANGES TO THE PRODUCT AND MANUAL WITHOUT PRIOR NOTICE.

1.Warning

- 1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 2. Children should be supervised to ensure that they do not play with the appliance.
- 3. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- 4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- 5. To avoid a hazard due to instability of the appliance, it must be fixed in accordance with the instructions.
- 6. When positioning the appliance, ensure the supply cord is not trapped or damaged.
- 7. Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.
- 8. Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- 9. Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- 10. Do not damage the refrigerant circuit.
- 11. Do not use electrical appliances inside the drink storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- 12. Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- 13. Children aged from 3 to 8 years are allowed to load and unload refrigerating appliances.
- 14. This appliance is intended to be used in household and similar applications such as
- staff kitchen areas in shops, offices and other working environments;
- farm houses and by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments;
- catering and similar non-retail applications.

- 15. To avoid contamination of drink, please respect the following instructions:
- Opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance.
- Clean regularly surfaces that can come in contact with drink and accessible drainage systems.
- Clean water tanks if they have not been used for 48 h, flush the water system connected to a water supply if water has not been drawn for 5 days.
- If the refrigerating appliance is left empty for long periods, switch off, defrost, clean, dry, and leave the door open to prevent mould developing within the appliance.

Note: This appliance contains flammable refrigerant R600a and foaming agent cyclopentane. Please avoid contact fire when you transport and use it.

Please ask professional for servicing when the machine broke down.

Please send it to your local appointed disposal station when you discard it.

For further information, please visit: www.vitrifrigo.com

2. Pre-installation warnings and safety precautions



After removing the packaging, check that the minibar is intact and without defects.



The minibar must be positioned on a flat base.



The minibar must be installed far from heat sources such as ovens, cookers, etc. and away from direct sunlight.



The cooling unit at the back of the minibar must be ventilated through openings in the furniturenit of about 200 cm each (see paragraph 5).



The ventilation openings of the minibar must be free of any obstructions for the correct circulation of air.



The supply voltage of the minibar is indicated on the label inside the minibar Volts itself. The warranty shall lapse in the event of problems caused by an incorrect electrical power supply.



The electrical connections must be checked by an expert electrician.

Use a power socket with ground connection. Damage to the product caused by electrical errors are not covered by the warranty.



If the power cord is damaged, it must be replaced only by a qualified person so as to avoid hazardous situations.



The polyurethane expanding agent used insulating material an Cyclopentane, which is safe for the ozone laver.



Do not insert oils or foods cooked with vegetable oils in unsealed containers in the minibar, insofar as they may damage the surfaces of your appliance. In case of spillage or oil stains on the surfaces, clean and rinse them with warm water.



This appliance must not be used by persons with reduced physical and abilities. including children, unless under the supervision of an adult responsible for their safety.



Children must always be supervised to ensure they don't play with the appliance and its packaging.



The minibar has been designed to keep beverages cold.

It is not suitable for the storage of food or medical devices



Do not store products containing explosive or flammable substances, or pressurised containers in the minibar.



Never use petrol, benzene or similar substances to clean the minibar.



The plug should always be disconnected before cleaning the minibar.



The appliance must never be exposed to

3. Technical specifications of Minibar



Internal Light and Temperature Regulation



MODEL TD40N	
Gross capacity	40 lt.
Net capacity	28 lt.
Refrigerant type / quantity	R600a / 25 g.
Product dim. without packaging H. x L. x D. mm	420 x 495 x 454
Type of Compartment	Moderate Temperature Compartment (2)
Energy Efficiency Class	G
Climate Class / Ambient Temperature	N / 16°C - 32 °C
Storage Temperature (°C)	8-14 °C.
Max. Input Power	58 Watts
Power	220-240V / 50-Hz
Energy Consumption (kWh/year)	165
Net Weight (Kg)	14
Gross Weight (Kg)	15
Thermostat Type	Manual, inside minibar
Sound Emission (dB)	23

4. Intended use of Minibar

This minibar is intended for use in indoor environments, it is not designed for use in outdoor environments.

5. Instructions for correct installation in a furniture unit


- ✓ Insert the minibar in a compartment having the following minimum dimens ions: H 422 x L 505 x D 505 mm
- ✓ Check that the minibar is placed on a horizontal surface and perfectly level. Inclinations greater than 2 degrees are not allowed for the purposes of the warranty.
- ✓ Leave a clearance between the back of the minibar and the wall of at least 5 cm.





- ✓ The top and bottom ventilation openings of the minibar must not be covered.
- ✓ It is necessary and essential to create an opening for the intake and output of air. Both openings must be at least 200 cm² each.
- ✓ The air passing through the duct must not be pre-heated.
- \checkmark If aeration grilles are used, they must include openings of at least 200 cm² each.
- ✓ Regardless of how the minibar is installed, to ensure its proper operation and best cooling performance, it is essential to ensure correct air circulation. This effect, as illustrated in the figure, consists in allowing the intake of fresh air from the front bottom part of the appliance and the subsequent expulsion of hot air from the top rear part.
- ✓ Ensure the correct aeration of the cooling unit by implementing a ventilation duct as illustrated in the images below.


FOR BUILT-IN INSTALLATIONS, IT IS ESSENTIAL TO CREATE PROPER AIR INTAKES SO AS TO FACILITATE THE EXPULSION OF THE HOT AIR PRODUCED.

Aeration with 200 cm² grille, E.g.: 40 cm x 5 cm

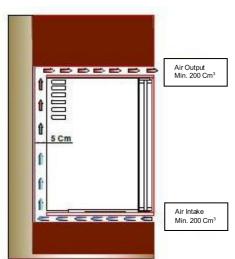

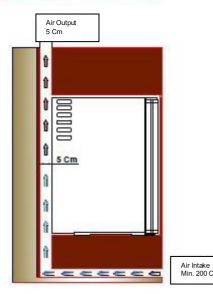

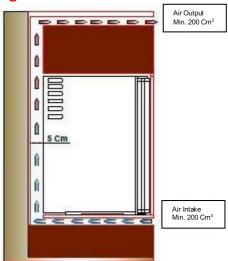

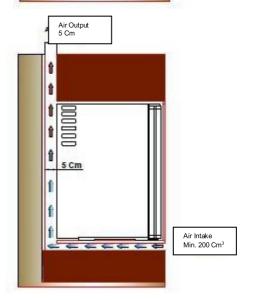

6. Fixing the minibar to the furniture unit

In order to fix the minibar to the furniture unit, the drawer needs to be completely removed.


- 1) Open the drawer completely;
- 2) Press the guide release device (1) as follows




Lower the black lever on the right-hand side of the drawer.



Lift the black lever on the left-hand side of the drawer.

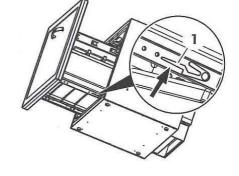

- 3) Pull the drawer out;
- 4) Using the pilot holes inside the minibar (2) anchor the minibar to the furniture unit using suitable screws.
- 5) Insert the drawer again, lowering and lifting the black levers on the sides on the guides.

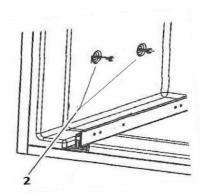

7. First use and regulation of Minibar

The minibar must be connected to an AC power outlet, with suitable grounding in accordance with legislation in force. Check that the minibar's voltage and frequency of use correspond to those in the country of use. In this case, connect the minibar plug and wait a few hours before placing any beverages inside; otherwise, do not insert the minibar plug.

The minibar is equipped with a manual regulation thermostat, located inside the minibar.



To control the internal temperature tum the knob, allowing the temperature to be controlled within a range of "0" to "3".

For a lower internal temperature, turn the knob clockwise toward "3";

For a higher temperature, turn the knob counter-clockwise toward "0".

The minibar has an **automatic defrost** function. The fridge will start its first defrost cycle 36 hours after it is first turned on and **will take about one hour to defrost**. Afterwards, the fridge will defrost every 36 hours of operation, for a duration of about one hour. The water generated by the defrost cycle is collected in the collection tank located at the back of the minibar, and eventually evaporates naturally.

8. Disposal

The packaging materials may be hazardous to children, therefore keep them out of their reach. Do not dispose of packaging materials as household waste, but in accordance with their classification. The minibar packaging is produced using recyclable materials.

Dispose of your old minibar without harming the environment. To do so use an authorised special waste collection centre or else return it to the retailer when purchasing a new equivalent appliance, based on the 'buy one return one' principle. Before disposing of the fridge, cut the electrical power cord and make any closures on the door unusable so as to protect children against all hazards.

This appliance bears the differentiated waste recycling symbol in compliance with European Waste Electrical and Electronic Equipment Directive (WEEE) 2012/19/EU. Ensure that this product is disposed of correctly to avoid potentially negative effects on the environment and human health.

Correct disposal of this product

This symbol on the product, or in its packaging, indicates that this product may not be treated as household waste. Instead, it should be taken to the appropriate waste collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by the inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council, your household waste disposal service, or the shop where you purchased the product.




9. Cleaning the Minibar

Before cleaning the minibar, turn it off and disconnect the power.

Clean the inside and outside of the minibar with warm water before use, then dry it carefully.

Never use soap, granular products, soda or other products different to water for cleaning.

For the minibar door gasket, follow the cleaning procedures described above, making sure not to use lubricating oils and not to expose the minibar to humidity.

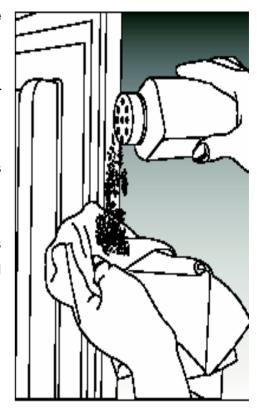


10. Instructions to follow to return the minibar

- 1) It is best to use the original packaging, otherwise pack it securely and carefully using cardboard or bubble wrap.
- 2) Before packaging the appliance, take out all beverages and any other products.
- 3) In the case of multiple minibars, use wooden pallets wrapped in cellophane.

11. Recommendations for improved energy savings

- 1. It is intended to be used exclusively for the cellar.
- 2. This refrigerating appliance is not suitable for the freezing foodstuffs.
- 3. The cellar is recommended to be designed at $12\,\mathrm{C}^\circ$.
- 4. The shelves placed in factory mode is the most efficient use of energy for the refrigerating appliances.
- 5. The following combination of shelves is recommended for energy to be used as efficiently as possible by the refrigeration unit.

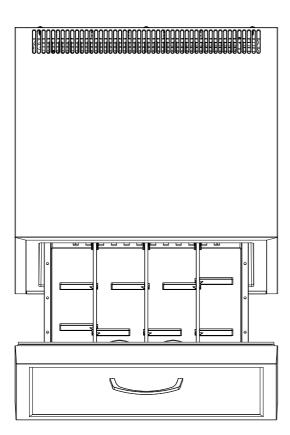

- 6. When the surrounding temperature is $25C^{\circ}$ and the cellar has no load, it will take around 3.5 hours to decrease the cellar's temperature from $25C^{\circ}$ to $12C^{\circ}$.
- 7. The cellar is recommended to be designed at $12\,\mathrm{C}^\circ$. The energy consumption is $0.452\,\mathrm{kWh/24h.lf}$ the setting temperature is higher than $12\,\mathrm{C}^\circ$, the energy consumption will be lower. If the setting temperature is lower than $12\,\mathrm{C}^\circ$, the energy consumption will be higher.

12. Troubleshooting

If the products presents a malfunction, make the following checks before contacting customer service:

PROBLEM	POSSIBLE CAUSES AND SOLUTIONS
The minibar doesn't turn on	Check that the outlet has power.
	Check that the plug is inserted properly.
	The circuit may be burnt out.
The minibar doesn't cool enough	The room temperature might be too high. The door has
	been opened too often and for too long. The door isn't
	closed properly.
	The temperature regulator hasn't been properly
	positioned.
	The door gaskets aren't sealing properly. Check that
	the air intakes are of the
	correct size and that they're not covered.
The internal lighting doesn't work	Check that the outlet has power.
	Check that the plug is inserted properly. The
	circuit may be burnt out.
	The globe may have burnt out.
The door doesn't close properly	The minibar isn't resting on a horizontal surface.
	The door handing has been changed incorrectly.
	The gaskets are dirty.
	The shelves or beverages aren't positioned properly.
	1

After making all these checks, if the problem persists, contact the retailer.

13. Warranty

The product is supplied with a warranty that covers manufacturing faults and defects for a period of 24 months from the date of purchase, validated by a tax invoice.

- It lapses if the installation instructions are not followed;
- It lapses if the product is misused, changes are made to the appliance or non-original spare parts are used;
- It shall not respond to any changes made to the appliance;
- It shall not respond to any damages to persons or property caused by misuse and/or incorrect installation.

IMPORTANT: THE COMPANY RESERVES THE RIGHT TO MODIFY THE CHARACTERISTICS OF THE PRODUCT WITHOUT ANY PRIOR NOTICE.



Symbol ISO 7010 W021

Warning;Risk of fire/flammable materials